


Four Steps to Setup the IP Cameras on TIGERSECU Nova Super HD DVR

Step 1. Connect your IP camera to the Internet, ensure the IP camera and DVR are on the same Network. (Send your IP camera brand and model number to service@tigersecu.com to check the camera compatibility)

Step 2. Go to DVR Main menu - Camera menu - Camera - **Tick** on IP Mode column - Click **Select**.

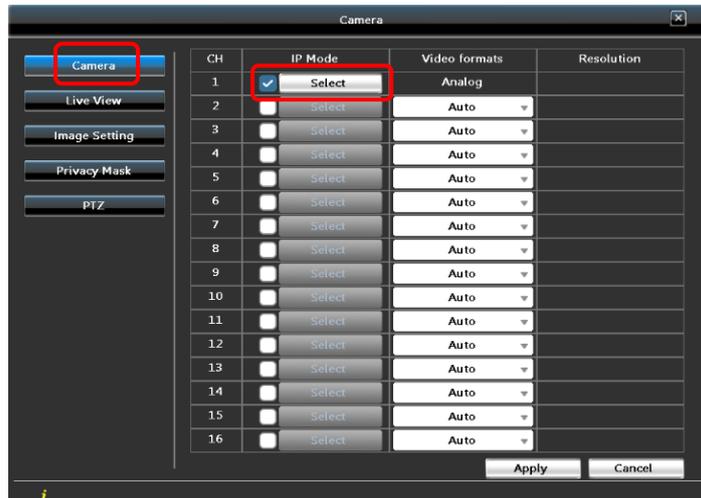


Step 3. Add an IP camera using the **ONVIF** protocol or **RTSP** stream links.

① Using the **ONVIF** protocol:

Select **ONVIF**, click **Refresh**, and wait for a few seconds.

The IP camera will appear in the list. Click the **Select** button. Then click **Apply**.

* Enable **KeepAlive** only if the IP camera frequently goes offline.

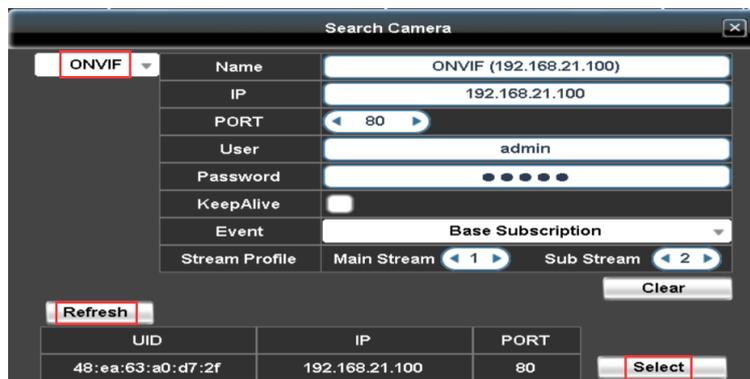

② Using **RTSP** stream links:

Select **RTSP** and enter the IP camera's **Name**, **Main Stream Url**, **Sub Stream Url**, **User** and **Password**. Then click **Apply**.

* **KeepAlive** is set to Off by default for RTSP IP cameras. Adjust the settings only if the IP camera frequently goes offline.

Search Camera

RTSP

Name: RTSP Camera 1(example)

MainStream Url: rtsp://192.168.21.106:554/mainstream01

SubStream Url: rtsp://192.168.21.106:554/substream01

User: admin

Password: ●●●●●●

KeepAlive: Off

Transport: TCP

Clear

Step 4. Go back to the Camera page. The added IP camera should be applied to the channel, then click **Apply**.

CH	IP Mode	Video formats	Resolution
1	<input checked="" type="checkbox"/> Select	rtsp://192.168.21.106:...	
2	<input checked="" type="checkbox"/> Select	192.168.21.100:80	1920x1080

Apply